

# Poor Man's GrassMaster®

*By Roger Cytron 01/12/13*



# How to change


Dis

to

Dat



Insect Zapper

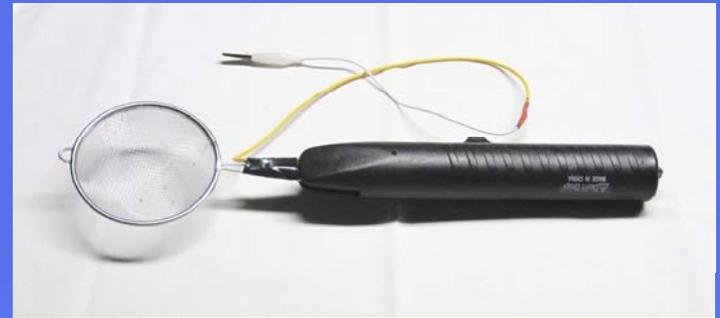

GrassMaster©


# Materials/Tools

1. **Electronic Insect Zapper (Harbor Freight, etc.)**
2. **4" inexpensive, flat handled strainer (grocery stores)**
3. **Clip lead plus extra wire**
4. **Small washers**
5. **Electrical tape**
6. **2 "D" batteries**
7. **¼" drill bit**
8. **Wire stripper**
9. **Rail nipper**
10. **Soldering iron (soldering gun preferable)**
11. **Phillips screwdriver**

# Step 1 – Disassemble Zapper




# Disassembly

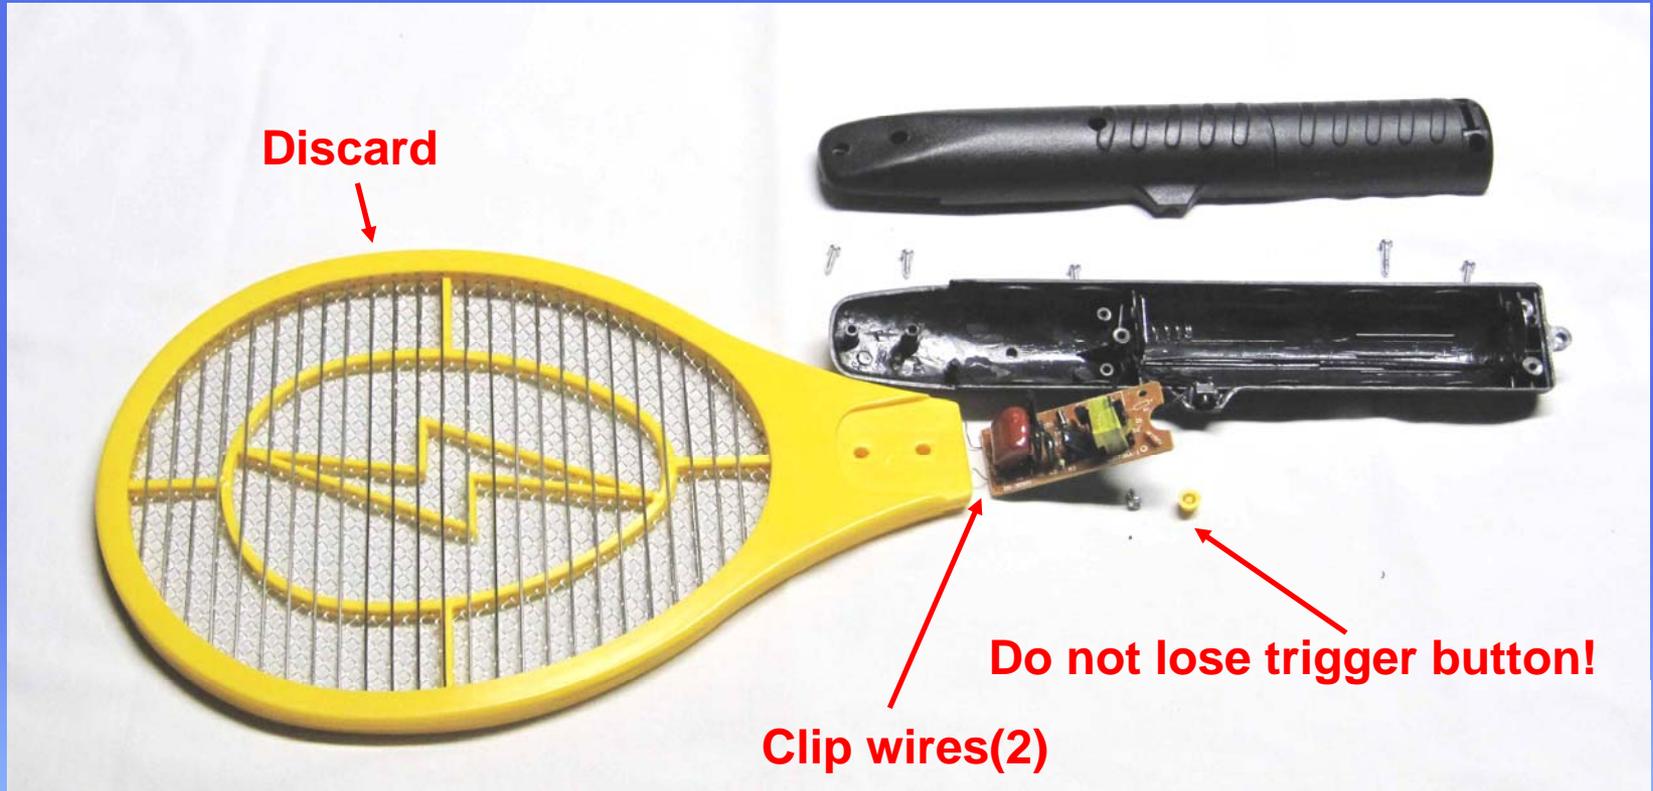


# Assembly




# Assembly

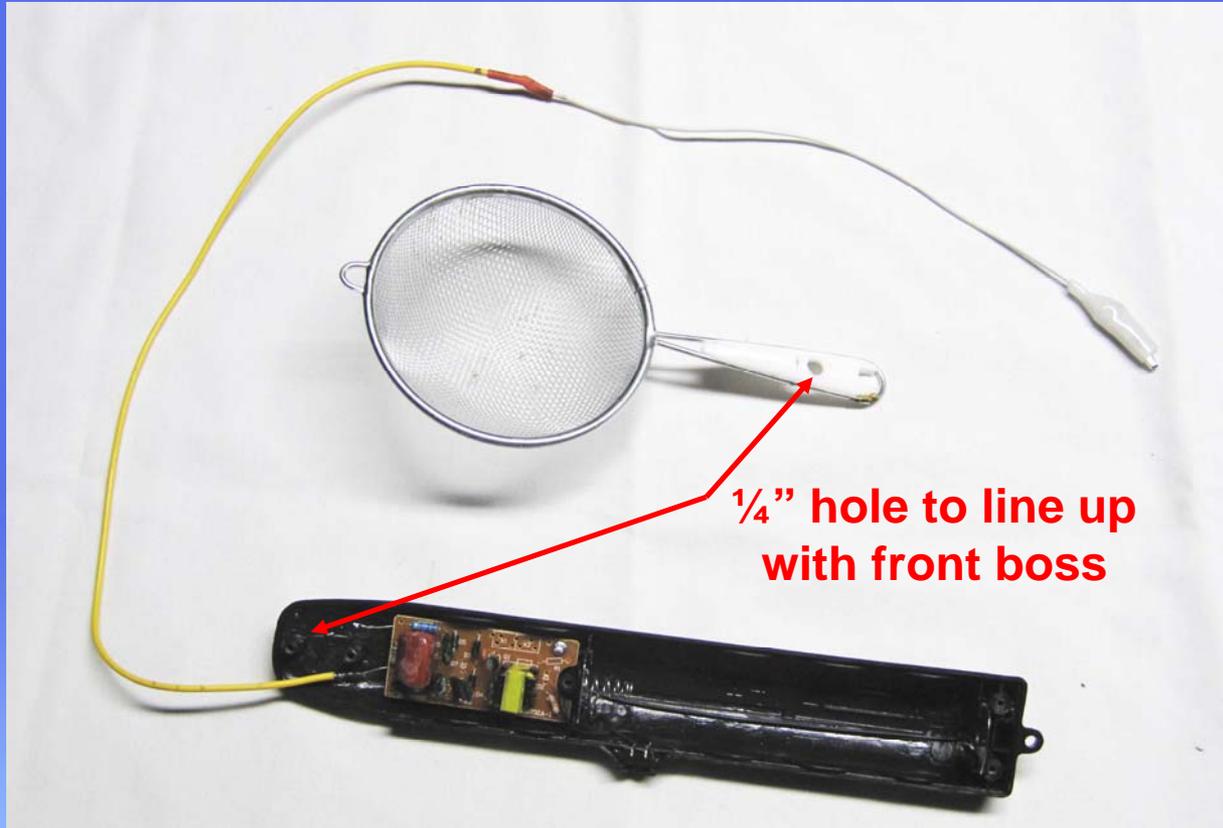

# Assembly

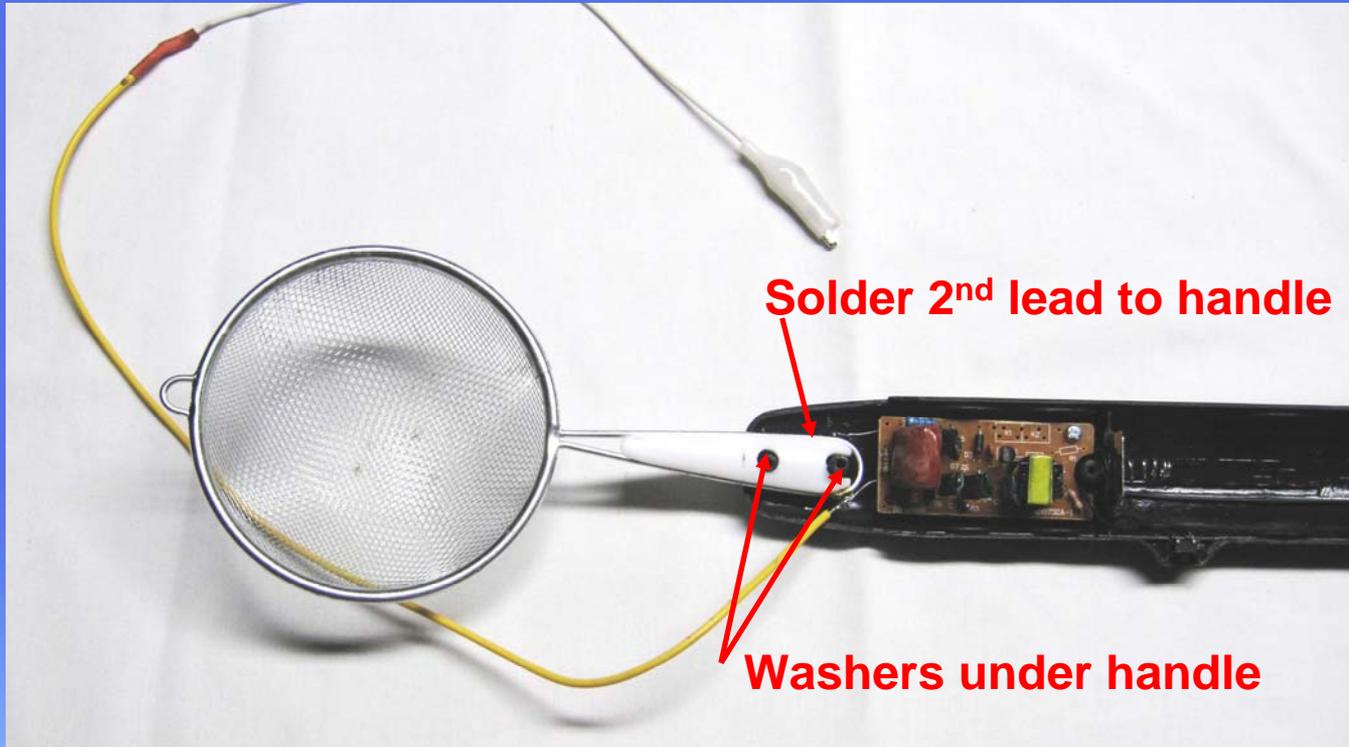


# Final Assembly

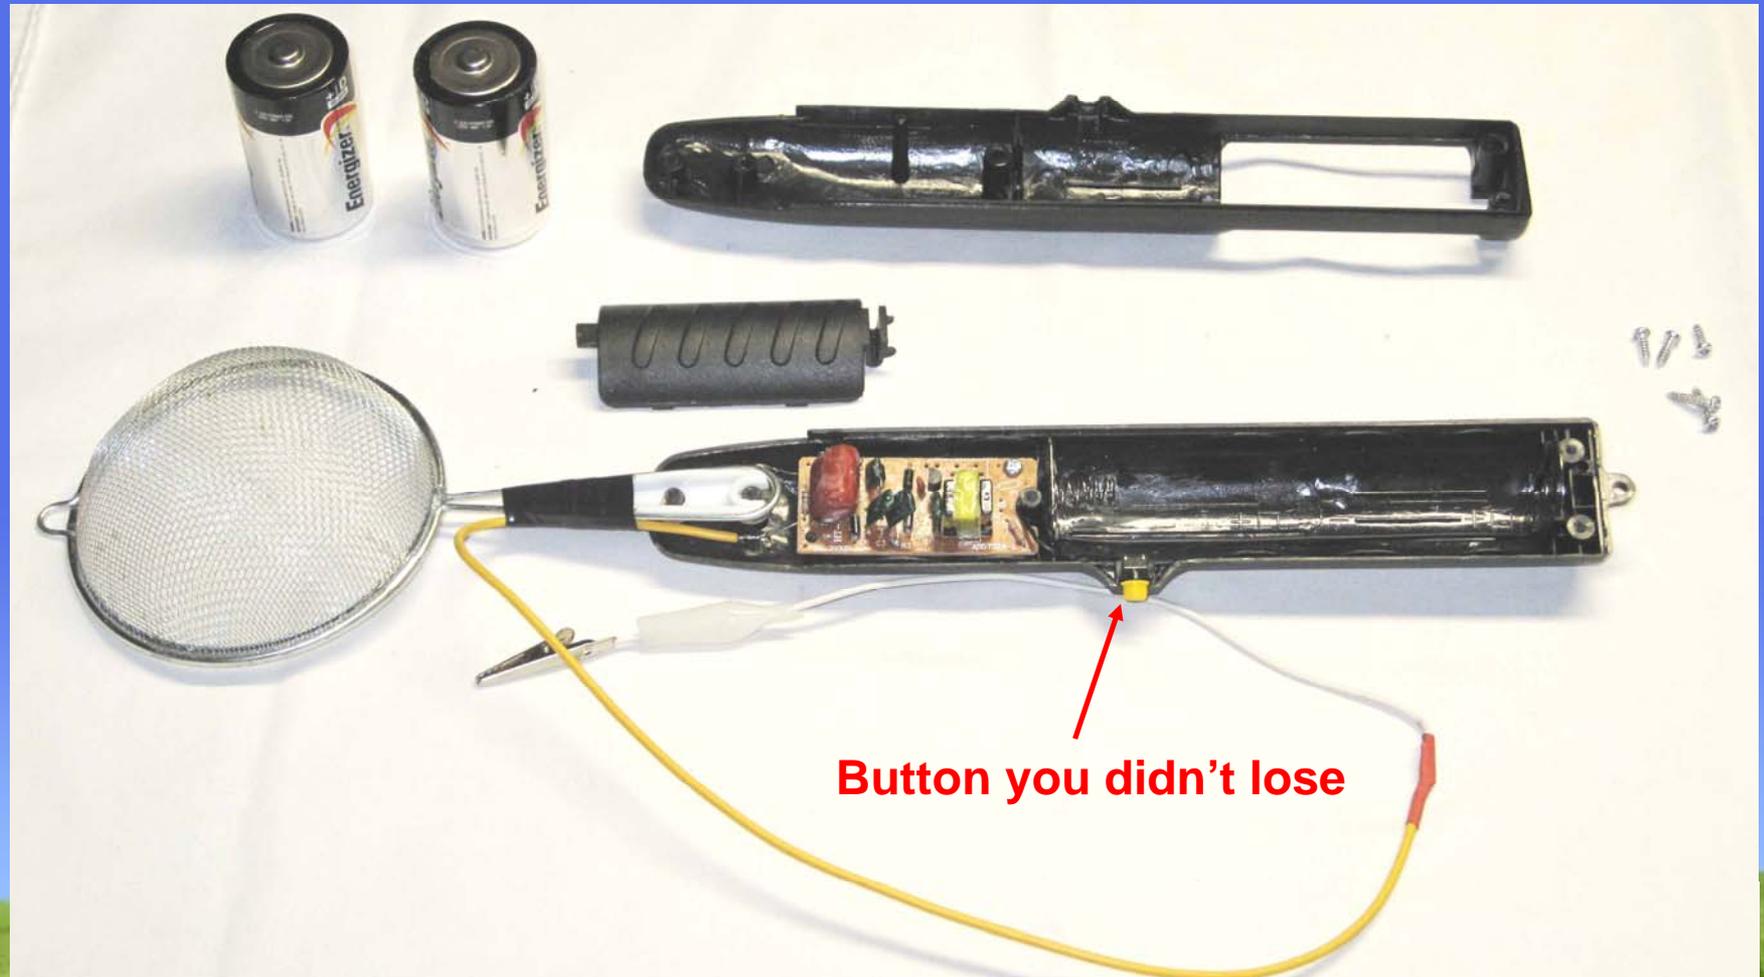

**Button you didn't lose**

# Ready to Flock!

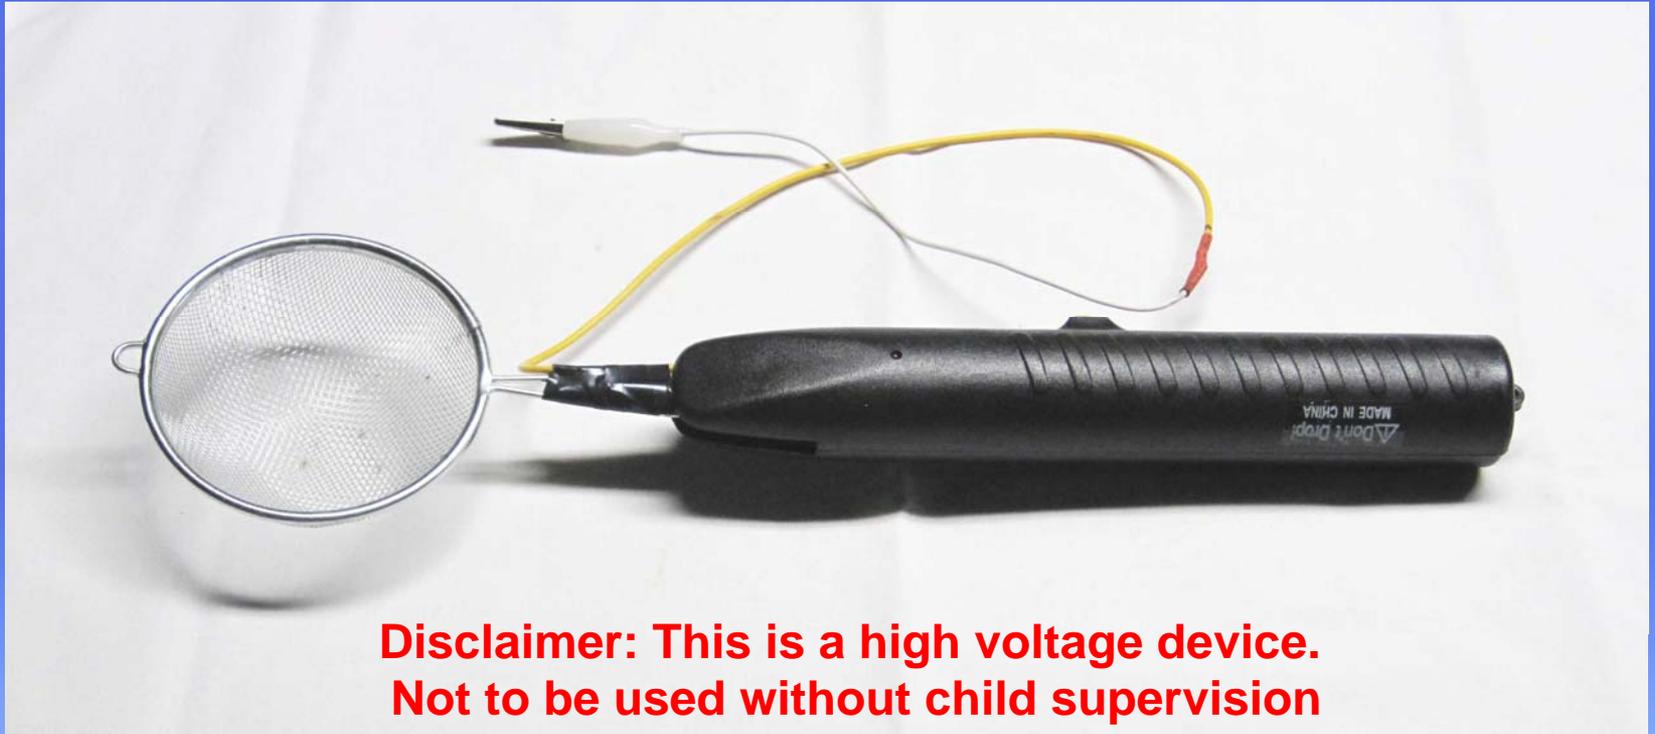

**Disclaimer: This is a high voltage device.  
Not to be used without child supervision**

# Examples







